

SPEC-D *Tuning*

1999-2001 AUDI A4 PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

*Please wear protection before you work on your vehicle.

*An assistant is useful when removing the front bumper from your vehicle.

*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

6mm Allen socket

6" Extension

T25 socket

T30 socket

If your Headlight is Halo type, you also need:

Wire Stripper

Wire Crimper

4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors

2 Red Wires (8 inch)

2 Black Wires (8 inch)

Product Part Numbers:

LHP-A406JM-8MR-APC

LHP-A406-8MR-APC



AUDI A4 PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS


^If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

^Please wear protection before you work on your vehicle.

^An assistant is useful when removing the front bumper from your vehicle.

^Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

^Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

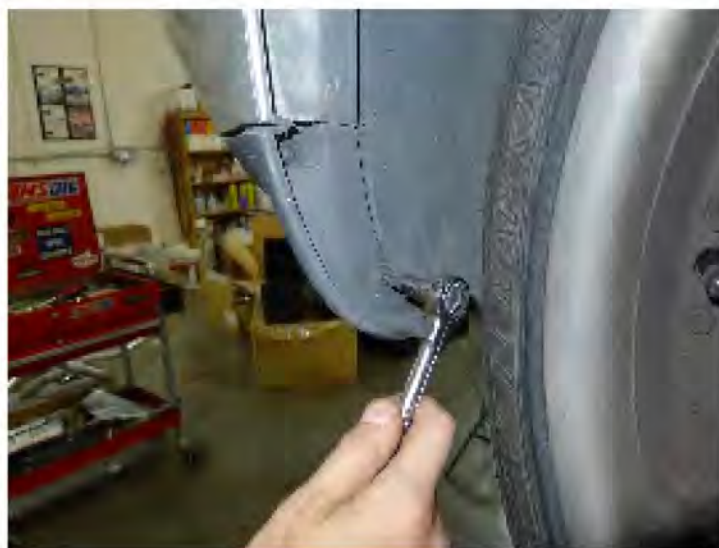

1. Remove the T25 screw



2. Remove the lower grill



3. Remove the 6mm allen bolt



4. Pull the front bumper forward off the car



5. Disconnect the fog light harness



6. Move the front bumper to the one side



7. Remove the (3) T 30 bolts



8. Remove the (3) T30 bolts



9. Remove the T30 bolt



10. Remove the headlight



11. Disconnect the headlight harness



12. Remove the signal light socket



13. Transfer the plastic nut onto the new headlight
Transfer the plastic bracket onto the new headlight



14. Connect the headlight harness to the new headlight
Please see the Halo and L.E.D installation instruction
If your headlights don't have HALO or L.E.D. You can skip it



15. Place the new headlight to the stock location



16. Tighten the (3) T30 bolts



17. Tighten the (3) T30 bolts



18. Tighten the T30 bolt



19. Disconnect the light socket



20. Replace the front bumper



21. Replace the 6mm allen bolt



22. Replace the lower grill



23. Tighten the T25 screw



24. Please repeat the steps in order from 1 to 23 for the opposite side



25. The installation is now complete